


Q: How to set up D-Link DI-604/DI-704

A:

1. Open your browser and type in the address to your router (usually 192.168.0.1) in the address field and login.
2. Go to Advanced > Virtual Server and select FTP from *Well known service* and add it to the list. Depending on the firmware version, you might only be able to enter a name, IP and port. Other versions allow you to specify which protocol to forward. Make sure you forward **TCP** and **UDP**.

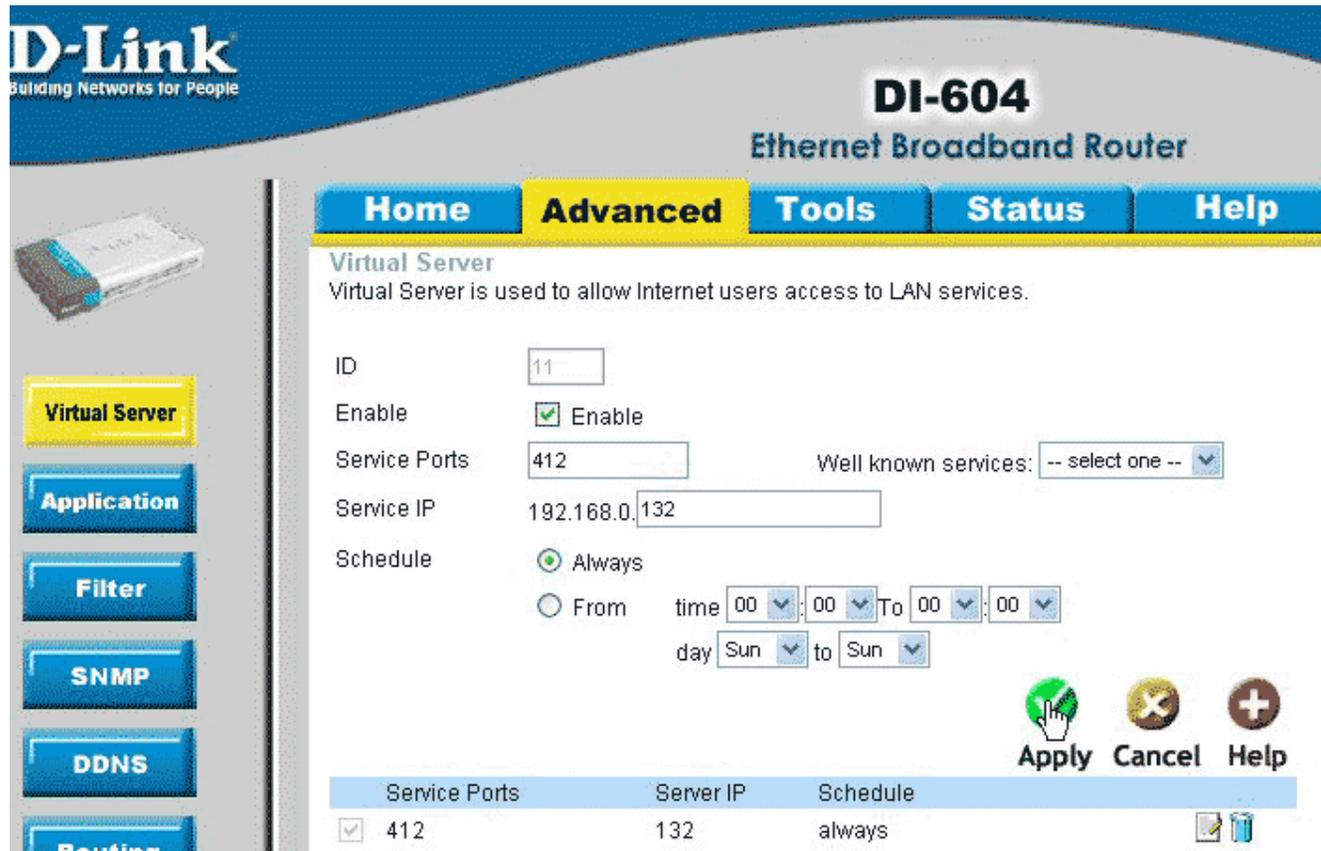

D-Link
Building Networks for People

DI-604

Ethernet Broadband Router

Home **Advanced** **Tools** **Status** **Help**

Virtual Server

Virtual Server is used to allow Internet users access to LAN services.

ID:

Enable: Enable

Service Ports: Well known services:

Service IP:

Schedule: Always

From time : To :

day to

Service Ports	Server IP	Schedule
<input checked="" type="checkbox"/> 412	132	always

3. Change the port number to whatever port you like, preferably something larger than 1024 (default is 412 for NMDC and 1412 for DC++)
4. Enter your computer's local IP. (Win 9x: Start > Run > winipcfg | Win 2k/XP: Start > Run > "cmd /k ipconfig /all" [without the ""])
5. In DC++ settings, enter your current external IP (can be found [here](#)) and the port you chose to forward.
6. You may have to reboot your router for the changes to take affect. If you can search and download files you have configured it successfully.